

Installation and operation manual

SUNWOOD MARINO



Version:

LPG



Specifications

Manufacturer	Sunderman Openhaarden V.O.F. / Sunwood ®
Contact details	Christiaan Huygensstraat 10 2665 KX Bleiswijk Tel: 010 5211325 Fax: 010 5227297
Model	Sunwood Marino
Versions	Natural gas / LPG
Countries of destination	AU, BE, BG, HR, CY, CZ, DK, EE, FI, FR, DE, GR, HU, IE, IS, IT, LV, LI, LT, LU, MT, NL, NO, PL, PT, RO, SK, SI, ES, SE, CH, TR, UK
PIN number (CE)	0063CM3866
Connection Propane	Pressure Regulator and hose (not included)


Suitable types LPG

Gas Category	I _{3p-30}	I _{3p-37}	I _{3P-50}	I _{3B/P-30}
Gas Type	G31	G31	G31	G30
Injector (mm)	1,1	1,1	1,1	1,1
Pressure (mbar)	30	37	50	30
Nom. Input (kW)	5,02	5,51	6,48	5,72

. Suitable gas types and pressures.

WARNING

- Read the manual carefully before you using this product. Never throw the manual away.
- This product and the gas cylinder need to be installed as per instructions in this manual and conform any national and/or local regulations.
- The minimum distance between the product and flammable materials has to be 1,5 meter.
- Never leave the fire unattended.
- Do not move the Marino while in use.
- Keep the product **out of reach for children** when the fireplace is on, and until it's completely cooled down.
- Always close the gas cylinder before you move the product.
- Never try to repair this product yourself, and don't make modifications to this product.
- Never block the air to the burner and or injector.
- Never block the air to the gas cylinder housing.
- With strong wind, always put the product on the breaks, or move the product to a wind still place to prevent from falling over.
- The use of this product in a confined space is dangerous and strictly forbidden! The product is intended to be used outside or in a well ventilated area. An area is considered well ventilated when a minimum of 25% of the wall's surface is open. See image below.

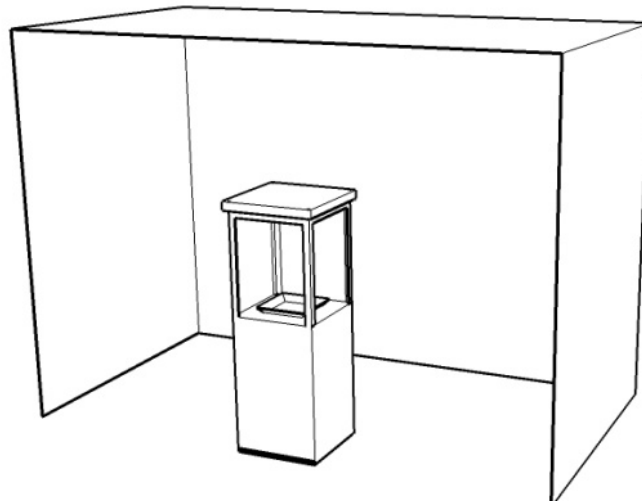


Operations Manual

You operate the fireplace with the gas control valve. You can find this valve behind the product's door. .

Turning on

1. Push the control knob and turn to the ignition position. You will hear a click sound which is the spark to turn on the pilot burner.
2. When the pilot burner is on keep the control knob depressed for approximately 10 seconds. Then let go.
3. Repeat steps one and two until the pilot burner doesn't go off when letting go of the button.

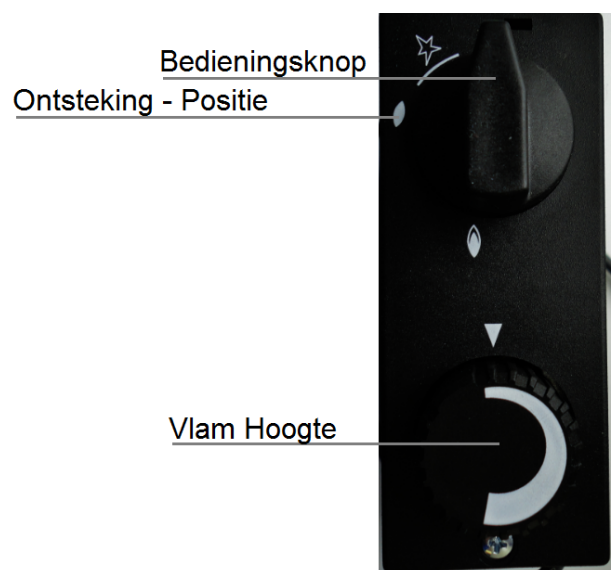

Adjusting the flames

1. You can set the flames to the desired position by turning the Flame Height Button.
2. Turn clock wise to set the fire to a lower position.
3. Turn counter clock wise to set the fire to a higher position.

Turning off

1. You turn the fireplace off by turning the control knob back to the same position as the image.

Installation manual

Step 1

Mount if you want the wheels.

The right way is from the button, bolt-wheel- Marino- ring- spring ring- nut. Use the delivered wrench.

production please contact your point of sales. Sunwood

WARNING – WHAT TO DO WHEN YOU SMELL GASS

In the event of gas leakage, the appliance shall not be used or if alight, the gas supply shall be shut off and the appliance shall be investigated and rectified before it is used again. If necessary request your dealer for assistance.

When checking the appliance for leakage a soap solution should be applied directly on all connections / fittings to pin point the exact location of the leak.

Do not use the appliance again until all leaks are resolved.

period.

1.Warranty only applies if the product has been used properly, according to its

Step 3

Assemble the top of the Marino with the delivered screws. Use an well fitting cross screwdriver.

Step 4

Mount the pressure regulator (30mbar)on the gas cylinder (max filled 11kg) Use an good fitting wrench. Hand tight is not sufficiently, this can result in dangerous situations. Change the cylinder only in well ventilated environment, out off open fire like candles or cigarettes. Check before changing the cylinder if the rubber ring in the pressure regulator is not damaged and in the right place. If so, you have to change the rubber ring, you are not allowed to use the Marino with out.

Step 5

Always Leave the gas cylinder vertical. Avoid contact with the hose on sharp edges, it can damage the hose. Be careful that you don't get a kinked hose!

intended use and according to the information in this manual.

2. If your dealer can not solve the the products defect Sunwood will assist per the dealers request.

WARNING

Check the hose at least once a month and every time you change the gas cylinder. If the hose contains any damage, it will need to be changed by a hose of the same length and quality.

3. The following is excluded from warranty
- Transport Costs

- Changes in color and damage to the coating
 - Glass and lava stones
 - Defects because of improper use or treatment of the product
4. For all our other terms and conditions the Terms and Conditions of “De Metaalunie” apply.